


GRX-IRPS-WH Partition Sensor

Description

The GRX-IRPS Partition Sensor uses an infrared transmitter/receiver pair to detect partition movement and, in conjunction with other Lutron products, coordinates lighting preset functions in areas such as partitioned meeting rooms or ballrooms. The GRX-IRPS may be used with GRAFIK Eye 3000 or 4000 systems, GRAFIK Eye QS, Energi Savr Node, or Quantum systems.

Features

- Automatically combines lighting preset functions when partition is open creating one large space.
- Lighting preset functions become independent as partition is closed creating several smaller spaces.
- For operation with GRAFIK Eye 3000/4000 system, the GRX-IRPS requires an interface (GRX-IO) and a power supply (GRX-12VDC or PP-DV).
- For operation with GRAFIK Eye QS, or Energi Savr Node systems, the GRX-IRPS requires an interface (QSE-IO) and a power supply (GRX-12VDC or PP-DV).
- For operation with Quantum, the GRX-IRPS requires either an interface (QSE-IO) or wallstation with contact closure input (QSW2-, QSWA-, or similar) and a power supply (GRX-12VDC or PP-DV).

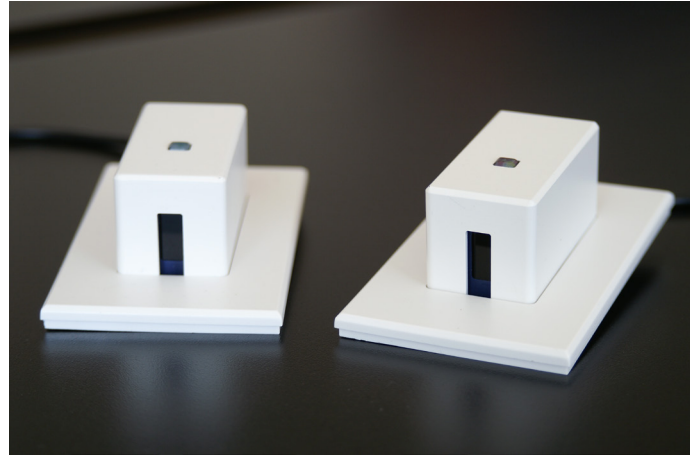

LUTRON SPECIFICATION SUBMITTAL

Job Name:	Model Numbers:
Job Number:	

Specifications

Power

- Operating voltage: Low-voltage PELV (Class 2: USA) 12–24 V $\overline{=}$, 135 mA.
 - Lutron recommends using a GRX-12VDC plug-in power supply or a PP-DV power supply (both ordered separately).
 - One GRX-12VDC can supply power to five sensor transmitter/receiver pairs.
 - One PP-DV can supply power to one sensor transmitter/receiver pair.
- Transmitter and receiver have reverse polarity and short-circuit protection.

Sensor Status Indicator

- Receiver and transmitter includes an LED indicator that assists in sensor alignment during installation and provides sensor operating status.
 - Transmitter LED will be green when properly powered and transmitting
 - Receiver LED will be orange when receiving beam and not illuminate when blocked.

System Capacity

- Each GRX-IO or QSE-IO Interface (prefix QWS2-, QSWA-, or similar; ordered separately) can accommodate up to five GRX-IRPS partition sensors for five different moveable walls.
- Each seeTouch wallstation (ordered separately) can accommodate one GRX-IRPS partition sensors for one moveable wall.
- Contact Closure Output from GRX-IRPS is configurable to Normally Open or Normally Closed from receiver unit.

Connection

- Wire leads provided.

Finish

- White painted plastic.

Environment

- 32 °F–104 °F (0 °C–40 °C). Relative humidity less than 90% non condensing.

Mounting

- Surface mount indoors only.

LUTRON SPECIFICATION SUBMITTAL

Job Name:


Model Numbers:

Job Number:

Dimensions and Mounting

- Receiver and transmitter surface mount in 1-gang U.S. wallboxes 3.5 in (89 mm) deep, mounted facedown from the ceiling. Indoor use only.
- The sensors must be mounted in a position where the partition separates the transmitter and receiver when the partition is closed.
- Transmitter and receiver may be located no more than 8 ft (2.43 m) apart.
- Adjustable mounting brackets allow easy alignment during installation.
- Wires feed through the back of the transmitter/receiver.

Side View

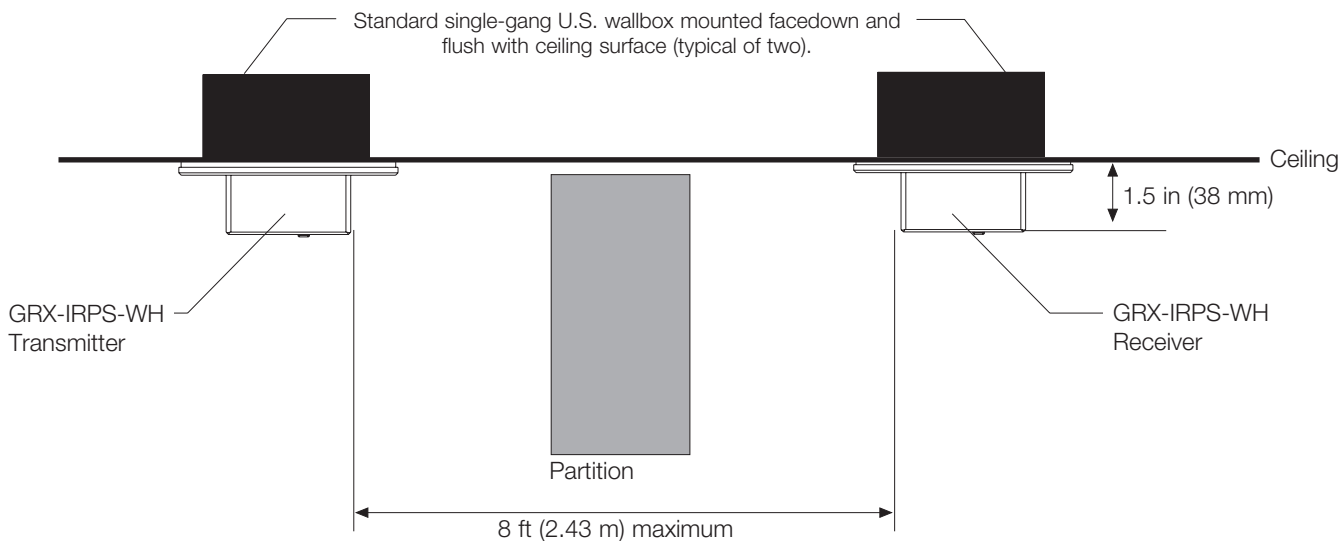

Top View



LUTRON SPECIFICATION SUBMITTAL


Job Name:

Model Numbers:


Job Number:

System Diagrams

GRAFIK Eye 3000 and 4000 Systems

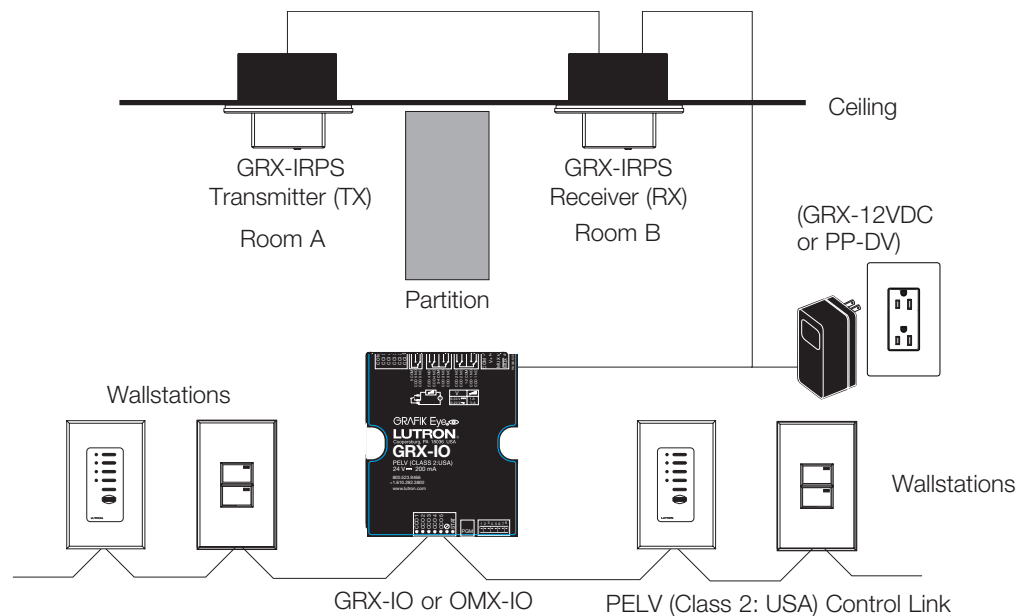

GRAFIK Eye QS System, Energi Savr Node System, Quantum System

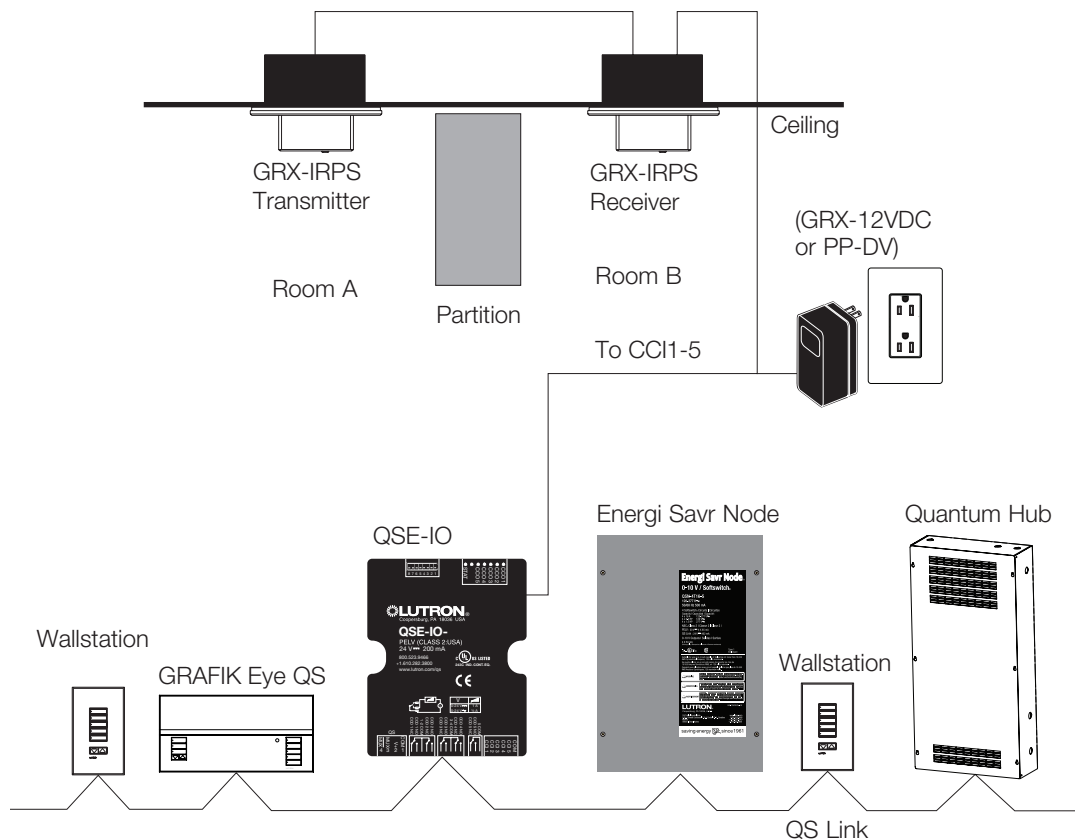

LUTRON SPECIFICATION SUBMITTAL


Job Name:

Model Numbers:

Job Number:

Wiring Diagrams


GRAFIK Eye 3000 and 4000 Systems

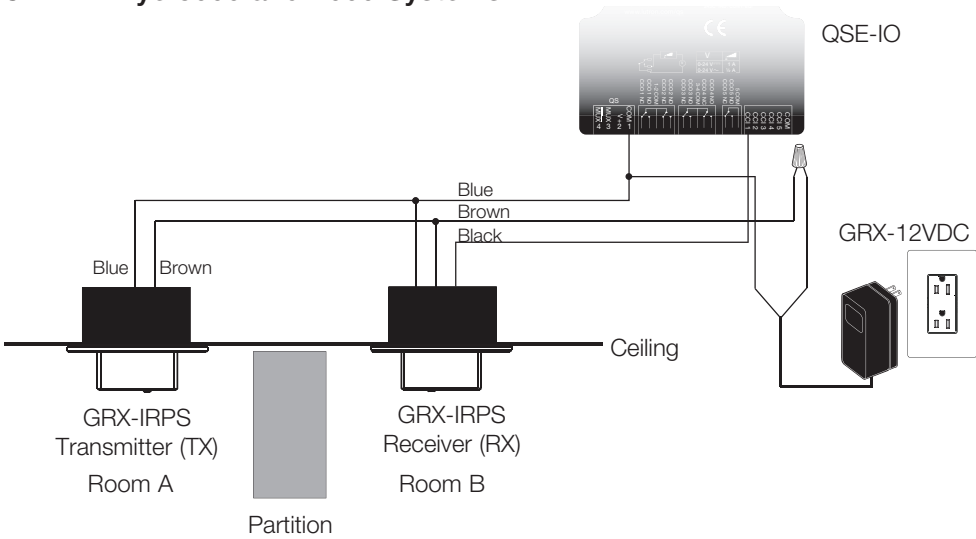

Note: Diagram represents a single partition. A QSE-IO will accomodate up to five GRX-IRPS partition sensors (five partitions). A single GRX-12VDC will power up to five GRX-IRPS partition sensors.

Note: The QSE-IO is programmed for partition mode. Set input closures for maintained inputs (refer to the QSE-IO installation instructions).

GRAFIK Eye QS System, Energi Savr Node System, Quantum System

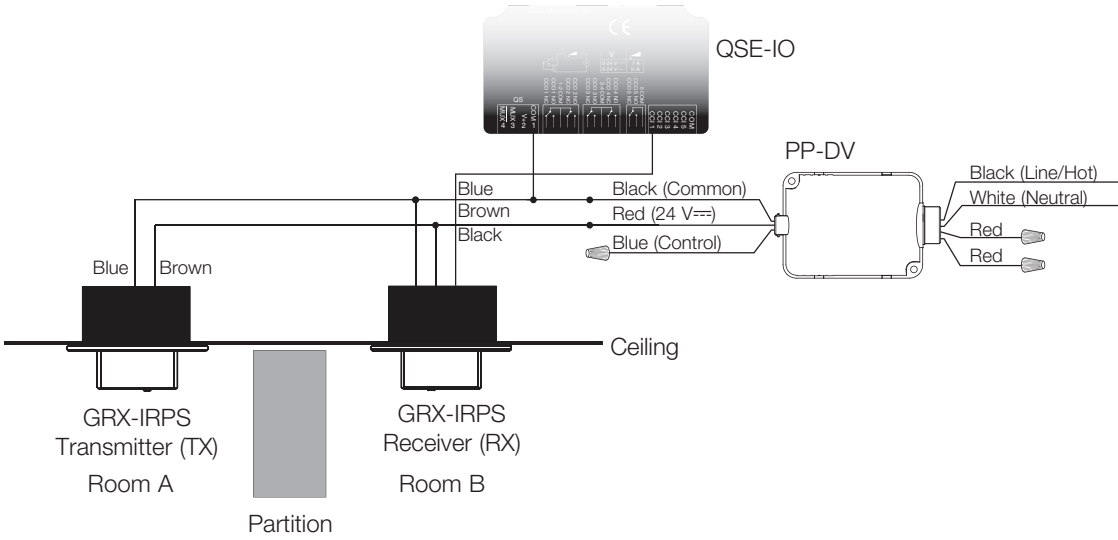

Note: Diagram represents a single partition. A QSE-IO will accomodate up to five GRX-IRPS partition sensors (five partitions). A single PP-DV will power up to five GRX-IRPS partition sensors.

Note: The QSE-IO is programmed for partition mode. Set input closures for maintained inputs (refer to the QSE-IO installation instructions).

Lutron, Lutron, GRAFIK Eye, Quantum, and seeTouch are trademarks of Lutron Electronics Co., Inc., registered in the U.S. and other countries.

Energi Savr Node and GRAFIK Systems are trademarks of Lutron Electronics Co., Inc.

LUTRON SPECIFICATION SUBMITTAL

Job Name:	Model Numbers:
Job Number:	